


Replacement Parts

ITEM #	PART #	DESCRIPTION
1	CE057	INDICATOR LIGHT
2	CE266	IGNITION MODULE- MODELS - LA/LX
	CE201	IGNITION MODULE- MODELS - LXR
3	CG142	GAS VALVE REPLACEMENT KIT - NAT.
	CG143	GAS VALVE REPLACEMENT KIT - LPG.
4	CE058	TRANSFORMER
5	CE004	BLOWER MOTOR - 40,000 TO 175,000 BTU
	CE013	BLOWER MOTOR - 205,000 TO 220,000 BTU
6	CH007	BLOWER GASKET
7	LE002	FLAME SENSOR ELECTRODE
8	LE001	SPARK ELECTRODE

ITEM #	PART #	DESCRIPTION
9	CE006	IGNITION WIRE
10	LG004	BURNER CUP
	LG005	BURNER CUP ASSEMBLY (C/W ELECTRODES)
11	CH011	SIGHT GLASS ASSEMBLY
12	CE025	AIR SWITCH - MODELS - LA/LX - 40
	CE025	AIR SWITCH - MODELS - LA/LX - 60
	CE025	AIR SWITCH - MODELS - LA/LX - 80
	CE142	AIR SWITCH - MODELS - LA/LX - 100
13	CH001	BURNER GASKET
14	VS022	AIR INLET KIT

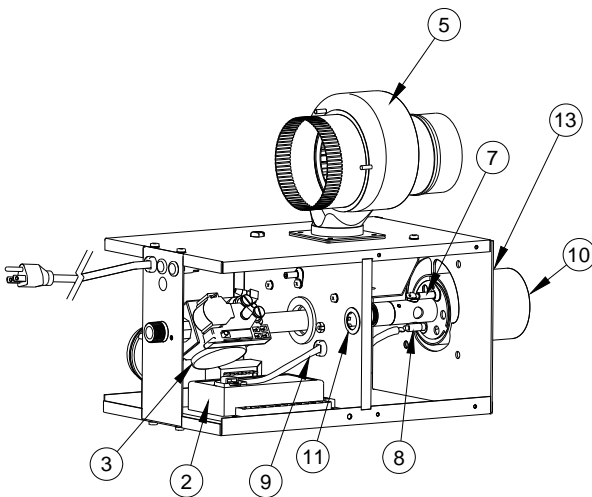

Note:
LXR Models use the
same parts as LX Models

